

User Guide Standards

2.36" E Ink Spectra ™ 3100 ePaper Display (EB2000-BDA)



Table of Contents

Firmw	are Up	date SOP1
1	Hard	ware Guide1
	(1)	Hardware Requirements1
	(2)	Hardware Installation1
2	Soft	ware Guide3
	(1)	Software Requirements
	(2)	Firmware Update by Application Software4
ePape	r Displa	ay Update SOP6
1	Intro	duction6
	(1)	Package Contents7
2	Hard	ware Guide8
	(1)	Hardware Requirements8
	(2)	Demo Kit Hardware Description9
	(3)	Hardware Installation10
3	Soft	ware Guide13
	(1)	Demo Kit Connection 13
	(2)	Update Initial Data 13
	(3)	Uploading Image14
4	Trou	bleshooting15
5	Cont	act Information15
6	Lega	I Information15


Firmware Update SOP

1 Hardware Guide

(1) Hardware Requirements

Buy a set of MSP-EXP430G2


You will get following stuffs in the package

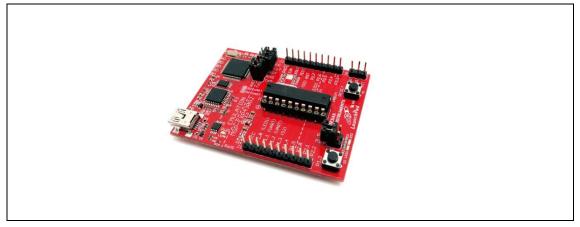

MSP-EXP430G2

(2) Hardware Installation

The programmer needs the jump line as the picture below

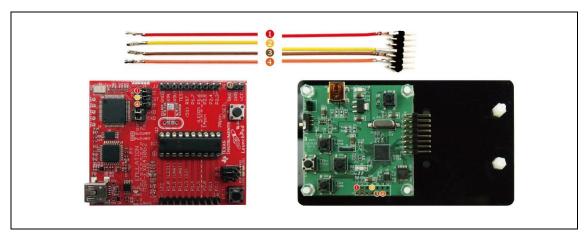

Connect to MSP430 and HULK MCU board

- Please connect the Dupont line from J3 (VCC pin) of MSP430 LaunchPad to J1's 2nd pin of Hulk
- Please connect the Dupont line from J3 (TEST pin) of MSP430 LaunchPad to J1's 8th


pin of Hulk

- Please connect the Dupont line from J3 (RST pin) of MSP430 LaunchPad to J1's 11th pin of Hulk
- Please connect the Dupont line from J6 (GND pin) of MSP430 LaunchPad to J1's 9th pin of Hulk

Please pay attention! It must remove the HULK's adapter board when updating Firmware.

When you update Firmware, please confirm if the D2(power indicator) or D2(power indicator) and D1(data indicator) of HULK are lighted.

- It can update Firmware when indicators are lighted.
- If the indicators are not lighted, please confirm the connection again.

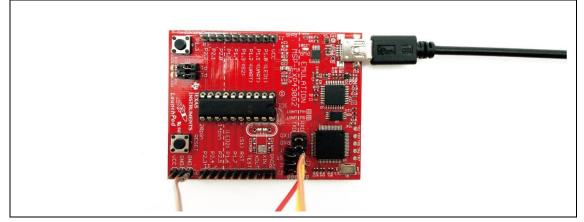

Refer to following figure to setup MSP-EXP430G2 and connect it to your PC

Connect to PC

2 Software Guide


(1) Software Requirements

Refer the guideline in following FET-Pro430 Lite website to download and setup driver of MSP-EXP430G2

https://www.elprotronic.com/pages/downloads

FET-Pro-430	
Inst. package for FET-Pro-430, includes GUI, DLL, and supporting material. Standard. V3.51 (TI-DLL V3.14.00.00) (21.Jun.2019)	
Inst. package for FET-Pro-430-LITE, includes GUI, and supporting material. Lite. V3.51 (TI-DLL V3.14.00.00) (21.Jun.2019)	

Refer to following figure to connect MSP-EXP430G2 with your PC and HULK together.

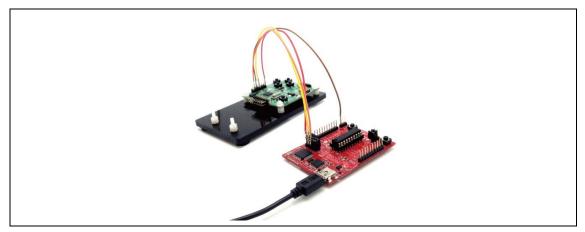

Connect to PC

(2) Firmware Update by Application Software

Press drop-down menu "Microcontroller Type" to select a MCU model MSP430F5502

Please check "Port USB Automatic" to select 4-wires

SN File Microcontroller Type Group: MSP430F5ex MSP430F5502 Totak	Path: C:\User:\yaozu R\Desktop\deno kit Power Device from Adapter 3.3 V Power Device from Adapter 3.3 V Power Device from Adapter 9.0 Voltage POWER DN/OFF POWER DN/OFF POWER SUM Source: DADADE B458 Memoy: Powice Setialization Read SN Net Model Group Revision Net SN: D0000000 Format: yyyy1224	Blow Seculty Fure □ Enable 9LOW FUSE □ Derice Action □ Reload Code File □ Perice Action □ Reload Code File □ Perice Action □ Verily Perice □ ERASE FLASH □ BLANK CHECK □ WRITE FLASH □ WRITE FLASH □ VERIIPY FLASH □ VERIIPY FLASH □ READ / COPY	
Port: USB Automatic JTAG (4-wires)	Erase / Write memory option: * All Memory *		

Press "Open code file" button to select a firmware file (.txt)

Press "AUTO PROG" button to update the firmware into MCU

Open Code Fie → C2_Example bit >4 SN Fie Microcontoler Type Status Graph MS P420F5502 Total Total Target Balance 0 Selected Device Information FASH - 514 bytes: FASH - 24 kb; Report Reading Code Fie done - Code size = 0.46840 (13277) bytes done	t C'Usert/vsozu/NDexktop/demo kit Power Device from Adapter Device Volage 23.V Device Volage PDWER ON/OFF Device Volage POWER ON/OFF Device Volage Check Sum Source: Device Setialization Device Setialization Neet SN: [0000000 Femal SN: Formit: ywy1234 Device Setialization	Blow Security Fuse F Enable BLOW FUSE Device Action F Relate Date Element AUTO PROG Verity Security Fuse ERASE FLASH BLANK CHECK WRITE FLASH WRITE FLASH VERITY FLASH READ / COPY	
Port: USB Automatic JTAG (4-wires)	Erase / Write memory option: "All Memory "	NEXT (F5)	

Show the Pass is firmware update ok.

Open Code File > C2_Example tot p SN File Microcontoler Type Statu Microcontoler Type Statu Microcontoler Type Taget Site tot Divice Information Cate Code size = 0.06440 (19277) bytes Ore JTAG communication misialization OK OH on the -(num time + 20.3 sec.) Ore	CUJerri Yuacu IXDeshtopidemo ki CUJerri Yuacu IXDeshtopidemo ki TOWER ON/OFF Office State Coeck Sum Souce: DolADE 8458 Memoy: DolA	Blow Security Fuse Foods Bow Security Fuse Bow Addom	
Port: USB Automatic JTAG (4-wires)	Erase / Write memory option: "All Memory "	- AUTO PROGRAM	

ePaper Display Update SOP

1 Introduction

HULK_Spectra3100 demo Kit, with Spectra 3100 e-Paper display allows E Ink clients to access hardware and software for evaluation. This kit demonstrates as a turnkey solution for those who are interested in designing with E Ink displays. Hardware and software design support is available from E Ink directly.

Spectra 3100 EPD is suitable for various applications, e.g. Electronic shelf labels

The low power consumption of the Spectra 3100 EPD is ideal for applications such as electronic shelf labels and indicators.

An All-in-one IC is embedded in the EPD, it include source/gate driver, TCON(Timing controller), PMIC(power management IC) and Temp. sensor. It allows users to rapidly design systems by using E Ink displays.

The kit allows E Ink clients to experience loading and viewing custom images on Spectra 3100 EPD. The use of MCU board to drive an E Ink EPD is demonstrated with the kit.

IAR Integrated Development Environment (IDE) is adopted to write, download, and debug an application.

(1) Package Contents

This demo kit contains the following:

- HULK_Spectra3100 demo Kit: MCU driving board and E Ink display adapter
- Spectra 3100 EPD (EPD size is decided by order)
- Mini USB cable



Demo Kit Contents

Specification

Item	Specification
МСИ	MSP430
TCON Solution	Hardware TCON
E Ink Display Panel	
Dimension (W × H × D, unit: mm)	68.1(H)x37.9(V)x0.85(D)
Shape	Square
Resolution	296(H) × 128(V),
Controller Board	
Input	5V(USB), power on when connected to PC

2 Hardware Guide

(1) Hardware Requirements



MCU board and display adapter



EPD panel



Mini USB cable



Windows PC

Minimum PC Requirements

CPU	Pentium III 800 MHz or later
RAM	128MB or greater
Required Software	Windows XP
Interface	USB port


(2) Demo Kit Hardware Description

The HULK_Spectra3100 demo Kit includes an MCU board (HULK) and an E Ink display adapter board. The MCU board and E Ink display adapter board are connected via a 16 pin header. The mini USB port on the demo kit supplies data and power to the MCU board and E Ink panel. Using the E Ink PC application, users can send image data to the board or update settings.



Demo Kit

There are two LEDs on the MCU board, LED 1 and LED 2. LED 1 indicates the board is powered. LED 2 is used as a multi-purpose function light.

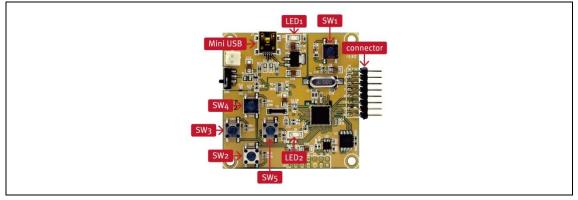

MCU Board for Demo Kit

* When LED2 is light on, EPD can't accept any command

Four push button switches are also on the MCU board. The table below provides a short description of the functions for each button.


Description of button functions

Button	Function
SW1	Reset
SW2	Next image
SW3	White image
SW4	Previous image
SW5	White/Black/Red/Yellow image

(3) Hardware Installation

The HULK_Spectra3100 demo kit is connected to a PC via a mini USB cable. The PC requires a USB driver to be installed on the PC.

Connect one end of the mini-USB cable to the HULK_Spectra3100 demo kit and other end to a USB port on a PC.

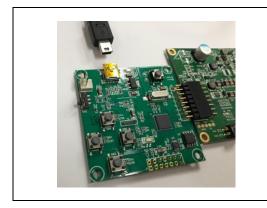



The device driver will be auto-installed in Windows 10. If the OS is windows 7, please follow below steps to install device driver.

Open Device Manager on the computer. A new device called **MSP430-USB Example** should be in the list. If this is the first time setting up the hardware, installation of the device driver is required.


🖆 Device Manager
File Action View Help
Act-FC Computer Disk drives Disk drives Human Interface Devices Keybeards Monitor Keybeards Monitor Mo

To install the device driver for **MSP430-USB Example**, double click on the device to bring up the device Window. Click on "Update Driver" and select the file "HULK-USB-Driver.inf".

File Action View Help	12 展 65	
Get-PC Genputer Ge	s His devices	

* This driver has been tested on Windows 7 64-bits

To verify the installation of the driver was successful, a new device called **Virtual COM Port (CDC)** should be present under **COM LPT.**

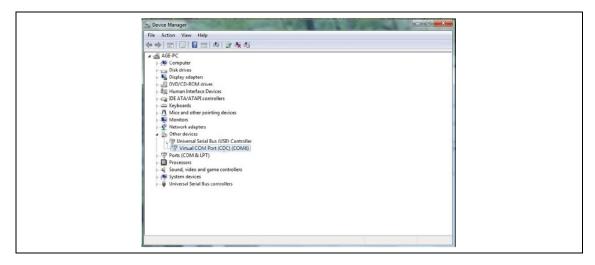

3 Software Guide

(1) Demo Kit Connection

- Open Flash_Burner.exe
- If connection is correct, the COM port number will show up.
- Select the COM port and press "connect"

ink	Jig Setting Tool E5 (2.9" 7.3" 1.64" 2.36" 3" 4.37" 8.14")	
COM port Device:	COM621 V disconnect	
Data Initial Data	▼ Load File Write data	Load_Image
		Write_Image

 If connection is incorrect, the COM port will show COM1~COM6 (Please check driver for the EVK)

(2) Update Initial Data

- Select "Initial Data"
- Press "Load file" to select an Initial file (.eink) that you want to use for the EPD.
- Press "Write data" to update Initial file into the kit

ink	Jig Setting Tool E5 (2.9" 7.3" 1.64" 2.36" 3" 4.37" 8.14")	Image	1
COM port Device:	COM621 v disconnect		
Data Initial Data	✓ Load File Write data		Load_Image Image 1 w
]	

^{៩៣k} E-ink			
COM port Device: WF44K WRY	Setting Tool 2.9" 7.3" 1.64" 2.36" 3" 4.37" 8.14") COM621 disconnect Load File Write data		Load_Ir Image 1 Write_In

* After Initial Data are updated, you should press "disconnect" and un-plug/plug Mini USB to restart the kit. If update is successful, the device name will show up

(3) Uploading Image

- Press "Load_Image" to select a image
- Select "image 1" ~ "image 2" to decide display sequence
- Press "Write_Image" to update image into the kit

Jig Setting Tool E5 (2.9" 7.3" 1.64" 2.36" 3" 4.37" 8.14")	
COM port Device: WF44KWRY COM621 - disconnect	
Data Initial Data	Load_Image Image 1 -
	Write_Image

* After all image are updated, you should press "disconnect" and un-plug/ plug Mini USB to restart the kit.

4 Troubleshooting

Below lists commonly asked questions.

Num	Name	Description	
1	HULK_Spectra3100 demo	Cause: USB cable is damaged	
	kit is not detected by the PC	Solution: Replace the USB cable	
	Demo kit connection fails	Cause: Progress bar is not completed	
2		Solution: Disconnect the demo kit from Mini USB and	
2		restart Flash_Burner_E28012_E5 1.0_20210306.exe	
		Cause: USB cable is damaged	

5 Contact Information

For more information, please visit

http://www.eink.com

For sales office addresses, please visit

http://www.eink.com/contact_sales.html

6 Legal Information

• Definitions

The document is a draft version only. The content is still under internal review and subject to formal approval which may result in modifications or additions. E lnk does not give any representations or warranties as to the accuracy or completeness of information included herein and shall have no liability for the consequences of use of such information.

• Right to make changes

E Ink reserves the right to make changes to information published in this document, including without limitation specifications and product descriptions, at any time and without notice.

Suitability for use

Products described in this document are intended for development purposes only and comes without any warranty. E Ink accepts no liability for inclusion and/or use of E Ink

products in commercial products or applications and therefore such inclusion and/or use is at the customer's own risk. In no event shall E Ink be liable for any direct, indirect, incidental, special, exemplary, or consequential damages (including, but not limited to, procurement of substitute goods or services; loss of use, data, or profits; or business interruption) however caused and on any theory of liability, arising in any way out of the use of the software.

Applications

Applications that are described herein for any of these products are for illustrative purposes only. E Ink makes no representation or warranty that such applications will be suitable for the specified use without further testing or modification.

No offer to sell or license

Nothing in this document may be interpreted or construed as an offer to sell products that is open for acceptance or the grant, conveyance or implication of any license under any copyrights, patents or other industrial or intellectual property rights.

• Trademarks

Notice: All referenced brands, product names, service names, and trademarks are the property of their respective owners.

• Revision History

Version	Date	Pag	Description	AuHULK
0.1	2021/10/27		Initial	Ryan