

User Guide Standards

8.14" E Ink Spectra ™ 6 ePaper Display (ED2208-HAB)



Table of Contents

Firmw	are Up	date SOP1
1	Harc	lware Guide1
	(1)	Hardware Requirements1
	(2)	Hardware Installation1
2	Soft	ware Guide3
	(1)	Software Requirements 3
	(2)	Firmware Update by Application Software4
ePape	r Displ	ay Update SOP6
1	Intro	oduction6
	(1)	Package Contents7
2	Harc	lware Guide8
	(1)	Hardware Requirements8
	(2)	Demo Kit Hardware Description9
	(3)	Hardware Installation10
3	Soft	ware Guide13
	(1)	Demo Kit Connection13
	(2)	Update Initial Data13
	(3)	Uploading Image14
4	Trou	bleshooting15
5	Cont	act Information15
6	Lega	l Information15


Firmware Update SOP

1 Hardware Guide

(1) Hardware Requirements

Buy a set of MSP-EXP430G2


You will get following stuffs in the package

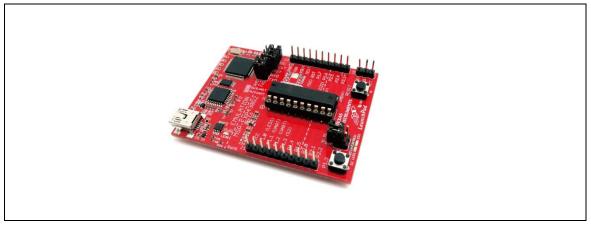

MSP-EXP430G2

(2) Hardware Installation

The programmer needs the jump line as the picture below

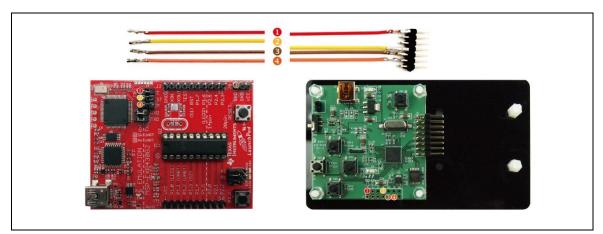

Connect to MSP430 and THOR MCU board

- Please connect the Dupont line from J3 (VCC pin) of MSP430 LaunchPad to J1's 2nd pin of Thor
- Please connect the Dupont line from J3 (TEST pin) of MSP430 LaunchPad to J1's 8th


pin of Thor

- Please connect the Dupont line from J3 (RST pin) of MSP430 LaunchPad to J1's 11th pin of Thor
- Please connect the Dupont line from J6 (GND pin) of MSP430 LaunchPad to J1's 9th pin of Thor

Please pay attention! It must remove the THOR's adapter board when updating Firmware.

When you update Firmware, please confirm if the D2(power indicator) or D2(power indicator) and D1(data indicator) of THOR are lighted.

- It can update Firmware when indicators are lighted.
- If the indicators are not lighted, please confirm the connection again.

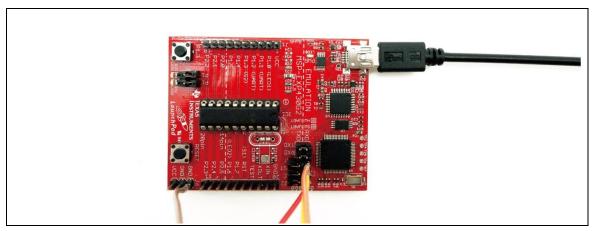

Refer to following figure to setup MSP-EXP430G2 and connect it to your PC

Connect to PC

2 Software Guide


(1) Software Requirements

Refer the guideline in following FET-Pro430 Lite website to download and setup driver of MSP-EXP430G2

https://www.elprotronic.com/pages/downloads

FET-Pro-430	
Inst. package for FET-Pro-430, includes GUI, DLL, and supporting material. Standard. V3.52 (TI-DLL V3.15.00.00) (28.Mar.2020)	
Inst. package for FET-Pro-430-LITE, includes GUI, and supporting material. Lite. V3.52 (TI-DLL V3.15.00.00) (28.Mar.2020)	
REP430F	
Installation package for REP430F, and supporting material.	

Refer to following figure to connect MSP-EXP430G2 with your PC and THOR together.

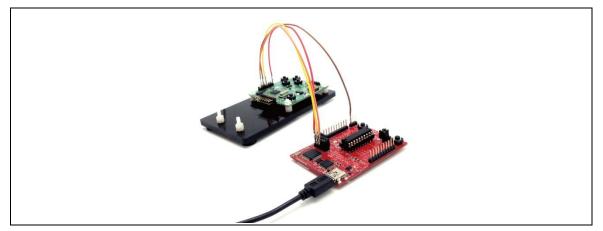

Connect to PC

(2) Firmware Update by Application Software

Press drop-down menu "Microcontroller Type" to select a MCU model MSP430F5502

Please check "Port USB Automatic" to select 4-wires

OpenCode File > C2_Example tot SN File Microcontroller Type Sumpli MSP430F550 MSP430F5502 Tark Tark Tark Balance BSL Selected Denice Information ReAd. 6144 bytes: FLASH - 24 kB: Report Read Read file Code File Co	CUserrywoou InDestopridemo ki Cuserrywoou InDestopridemo ki Source International Control (International Control (Internation	Blow Seculty Fue Enable BLOW FUSE Device Action F Robod Code Fie F Enable Blank Check AUTO PROG. Verily Seculty Fue ERASE FLASH BLANK CHECK WRITE FLASH VERILPY FLASH VERILPY FLASH READ / COPY	
Port: USB Automatic JTAG (4-wires)	Erase / Write memory option:		

Press "Open code file" button to select a firmware file (.txt)

Press "AUTO PROG" button to update the firmware into MCU

Open Code File → C2_Esample tot > SN File Microcontroller Type Status Total: Total: Total: Total: Balance: 0 SSE-Cool MSP430F580 Total: Total: Total: Balance: 0 Selected Device Information RAM - 6144 bytes: FLASH - 24 kB: Report Reading Code File done - Code size = 0x4840 (19277) bytes done	the C-Usert/secouk/Desktop/demo ka Power Device from Adapter Tower Device from Adapter Dower Device Settlatefor Dower Device Settlatefor Next Model Group Perioder Next Model Group Perioder	Bitro Seculty Fute Bitro Seculty Fute Bitro Seculty Fute Bitrow F	
Port: USB Automatic JTAG (4-wires)	Erase / Write memory option: "All Memory "		

Show the Pass is firmware update ok.

SN File Microconfieller Type Groupi (MSPA395500) MSPA30F5002) Tagert (MSPA39F500) SsL: Selected Device Information RMM - 6144 Syler; FLASH - 24 kB; Report		Bow Seculty Fue Endle BLOW FUSE Device Action Device Action Very Seculty Fue Very Seculty Fue Very Seculty Fue ELANK CHECK Very Seculty Fue Very Seculty Fue ELANK CHECK Very Seculty Fue ELANK CHECK Very Fue ELANK CHECK Very Fue ELANK CHECK Very Fue ELANK CHECK	
Port: USB Automatic JTAG (4-wires)	Erase / Write memory option: " All Memory "	- AUTO PROGRAM	

ePaper Display Update SOP

1 Introduction

THOR_Spectra 6 demo Kit, with Spectra 6 ePaper display allows E Ink clients to access hardware and software for evaluation. This kit demonstrates as a turnkey solution for those who are interested in designing with E Ink displays. Hardware and software design support is available from E Ink directly.

Spectra 6 EPD is suitable for various applications, e.g. Electronic shelf labels

The low power consumption of the Spectra 6 EPD is ideal for applications such as electronic shelf labels and indicators.

An All-in-one IC is embedded in the EPD, it include source/gate driver, TCON(Timing controller), PMIC(power management IC) and Temp. sensor. It allows users to rapidly design systems by using E Ink displays.


The kit allows E Ink clients to experience loading and viewing custom images on Spectra 6 EPD. The use of MCU board to drive an E Ink EPD is demonstrated with the kit.

IAR Integrated Development Environment (IDE) is adopted to write, download, and debug an application.

(1) Package Contents

This demo kit contains the following:

- THOR_Spectra 6 demo Kit: MCU driving board and E Ink display adapter
- Spectra 6 EPD (EPD size is decided by order)

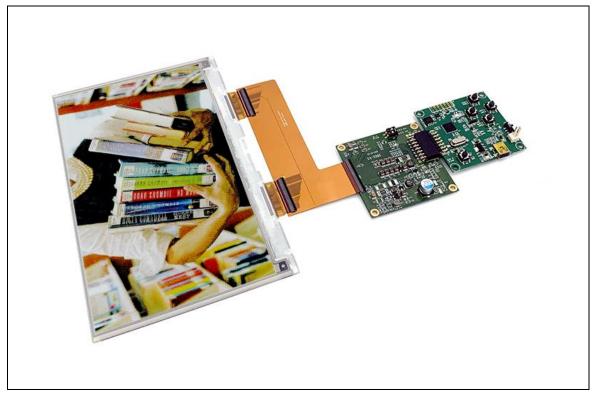

Demo Kit Contents

Specification

Item	Specification
MCU	MSP430
TCON Solution	Hardware TCON
E Ink Display Panel	
Dimension (W × H × D, unit: mm)	191.9(H)x119.4(V)x0.85(D)
Shape	Square
Resolution	1024(H) × 576(V)
Controller Board	
Input	5V(USB), power on when connected to PC

2 Hardware Guide

(1) Hardware Requirements



MCU board and display adapter



EPD panel



Mini USB cable



Windows PC

Minimum PC Requirements

СРИ	Pentium III 800 MHz or later
RAM	128MB or greater
Required Software	Windows XP
Interface	USB port


(2) Demo Kit Hardware Description

The THOR_Spectra 6 demo Kit includes an MCU board (THOR) and an E Ink display adapter board. The MCU board and E Ink display adapter board are connected via a 16 pin header. The mini USB port on the demo kit supplies data and power to the MCU board and E Ink panel. Using the E Ink PC application, users can send image data to the board or update settings.



Demo Kit

There are two LEDs on the MCU board, LED 1 and LED 2. LED 1 indicates the board is powered. LED 2 is used as a multi-purpose function light.

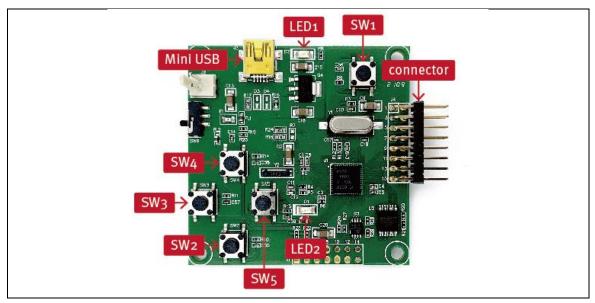

MCU Board for Demo Kit

* When LED2 is light on, EPD can't accept any command

Four push button switches are also on the MCU board. The table below provides a short description of the functions for each button.


Description of button functions

Button	Function
SW1	Reset
SW2	Next image
SW3	White image
SW4	Previous image
SW5	White/Black/Red/Yellow/Blue/Green image

(3) Hardware Installation

The THOR_Spectra 6 demo kit is connected to a PC via a mini USB cable. The PC requires a USB driver to be installed on the PC.

Connect one end of the mini-USB cable to the THOR_Spectra 6 demo kit and other end to a USB port on a PC.

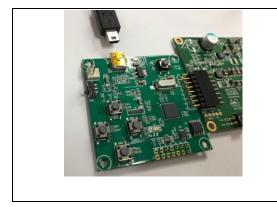



The device driver will be auto-installed in Windows 10. If the OS is windows 7, please follow below steps to install device driver.

Open Device Manager on the computer. A new device called **MSP430-USB Example** should be in the list. If this is the first time setting up the hardware, installation of the device driver is required.


Device Manage File Action View Help Action View Help Disk drives Disk	
p i ∰ Universal Serial Bus controllers	

To install the device driver for **MSP430-USB Example**, double click on the device to bring up the device Window. Click on "Update Driver" and select the file "THOR-USB-Driver.inf".

i De	Device Manager	
	le Action View Help	
4.		
	AGE-PC Dick drives Dick drives Dick drives Dick drives Dick drives Divt(COR drives Divt(COR drives) Divt(COR	
Laune	inches the Update Driver Software Wizard for the selected device.	

* This driver has been tested on Windows 7 64-bits

To verify the installation of the driver was successful, a new device called **Virtual COM Port (CDC)** should be present under **COM LPT.**

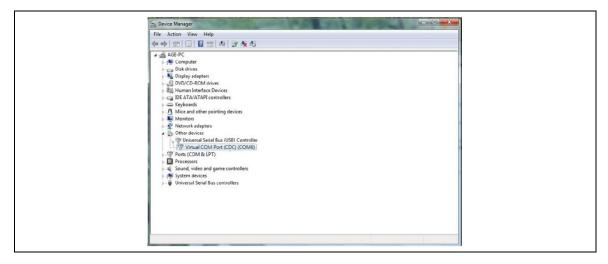

3 Software Guide

(1) Demo Kit Connection

- Open Flash_Burner.exe
- If connection is correct, the COM port number will show up.
- Select the COM port and press "connect"

COM port	Jig Setting Tool - E5/E6	
Device:	COM621 - disconnect	
Data	T 1 P2-	T 3 T
Initial Data	▼ Usad File	Load_Image
	Wille Uala	Image 1

 If connection is incorrect, the COM port will show COM1~COM6 (Please check driver for the EVK)

(2) Update Initial Data

- Select "Initial Data"
- Press "Load file" to select an Initial file (.eink) that you want to use for the EPD.
- Press "Write data" to update Initial file into the kit

2.9 " 7	ig Setting Tool - E5/E6	
-COM port Device:	COM621 - disconnect	
Data Initial Data	Load File	Load_Image
	Write data	Image 1 + Write_Image

fink E-ink		
COM port Device: WF44K WF Data Initial Data	Jig Setting Tool - E5/E6	Load_Ir Image 1 Write_Ir

* After Initial Data are updated, you should press "disconnect" and un-plug/plug Mini USB to restart the kit. If update is successful, the device name will show up

(3) Uploading Image

- Press "Load_Image" to select a image
- Select "image 1" ~ "image 2" to decide display sequence
- Press "Write_Image" to update image into the kit

E-ink		- • •
	Setting Tool - E5/E6	
COM port Device: WF44KWRY	COM621 - disconnect	
Data Initial Data 🗸	Load File Write data	Load_Image
		Write_Image
_E6_2.5_20220803		

* After all image are updated, you should press "disconnect" and un-plug/ plug Mini USB to restart the kit.

4 Troubleshooting

Below lists commonly asked questions.

Num	Name	Description
1	THOR_Spectra 6 demo kit is	Cause: USB cable is damaged
	not detected by the PC	Solution: Replace the USB cable
	Demo kit connection fails	Cause: Progress bar is not completed
2		Solution: Disconnect the demo kit from Mini USB and
		restartFlash_Burner_E28012_E5_E6_2.5_20220803.exe
		Cause: USB cable is damaged

5 Contact Information

For more information, please visit

http://www.eink.com

For sales office addresses, please visit

http://www.eink.com/contact_sales.html

6 Legal Information

• Definitions

The document is a draft version only. The content is still under internal review and subject to formal approval which may result in modifications or additions. E Ink does not give any representations or warranties as to the accuracy or completeness of information included herein and shall have no liability for the consequences of use of such information.

• Right to make changes

E Ink reserves the right to make changes to information published in this document, including without limitation specifications and product descriptions, at any time and without notice.

• Suitability for use

Products described in this document are intended for development purposes only and comes without any warranty. E Ink accepts no liability for inclusion and/or use of E Ink

products in commercial products or applications and therefore such inclusion and/or use is at the customer's own risk. In no event shall E Ink be liable for any direct, indirect, incidental, special, exemplary, or consequential damages (including, but not limited to, procurement of substitute goods or services; loss of use, data, or profits; or business interruption) however caused and on any theory of liability, arising in any way out of the use of the software.

Applications

Applications that are described herein for any of these products are for illustrative purposes only. E Ink makes no representation or warranty that such applications will be suitable for the specified use without further testing or modification.

No offer to sell or license

Nothing in this document may be interpreted or construed as an offer to sell products that is open for acceptance or the grant, conveyance or implication of any license under any copyrights, patents or other industrial or intellectual property rights.

• Trademarks

Notice: All referenced brands, product names, service names, and trademarks are the property of their respective owners.

• Revision History

Version	Date	Pag	Description	AuTHOR
0.1	2024/09/09		Initial	Ryan