
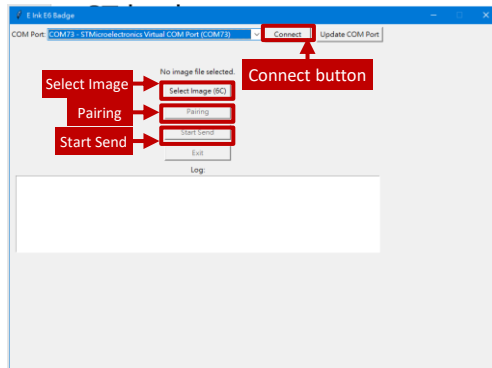


Eink Quick Start Guide for 3.6" Spectra 6 NFC EVK

Panel and Bagi (NFC) EVK connection SOP

Demo Kit Hardware Description

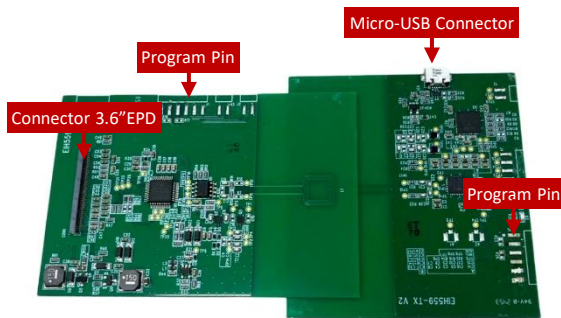

Button/Option	Function
Connect	Check USB connection
Select Image	Load image and display panel
Pairing	Tx&Rx Device pairing
Start Send	Image display

Assembly and Operating Instructions

① Attach the 3.6" panel to Rx Connector



② Connect the micro-USB cable to Tx



③ Connect the micro-USB cable to PC/NB



④ click **Connect button**

⑤ click **Select Image**

⑥ click **Pairing** to pairing successful

⑦ Action ok shows up, click confirm

⑧ Click **Start Send** to transfer image data

Disassembly Instructions

① Disconnect the micro-USB from PC/NB

② Disconnect the micro-USB cable from Tx

③ Detach the 3.6" panel from Rx